

ISSUE OF PERMITS TO USE ROADS OF NATIONAL SIGNIFICANCE BY DRIVING OVER-DIMENSIONED AND / OR HEAVY VEHICLE ELECTRONIC SERVICE SYSTEM

USER MANUAL


Answers to Frequently Asked Questions (FAQ) are provided at the end of the User Manual.

For more useful information on the use roads by driving over-dimensioned and / or heavy vehicle, look for the website of the State Enterprise Lithuanian Road Administration <https://lakd.lrv.lt>.

COMPLETION AND SUBMISSION OF THE APPLICATION

ⓘ Before filling in or adjusting the application form so that the form works properly according to the latest software code, we recommend updating the browser by clicking the buttons:

- on Windows computers: **Ctrl + F5**;
- on MacOS computers:
 - **Command + Shift + R** if you are using Chrome or Firefox browser
 - **Option + Command + E** if you are using Safari browser.

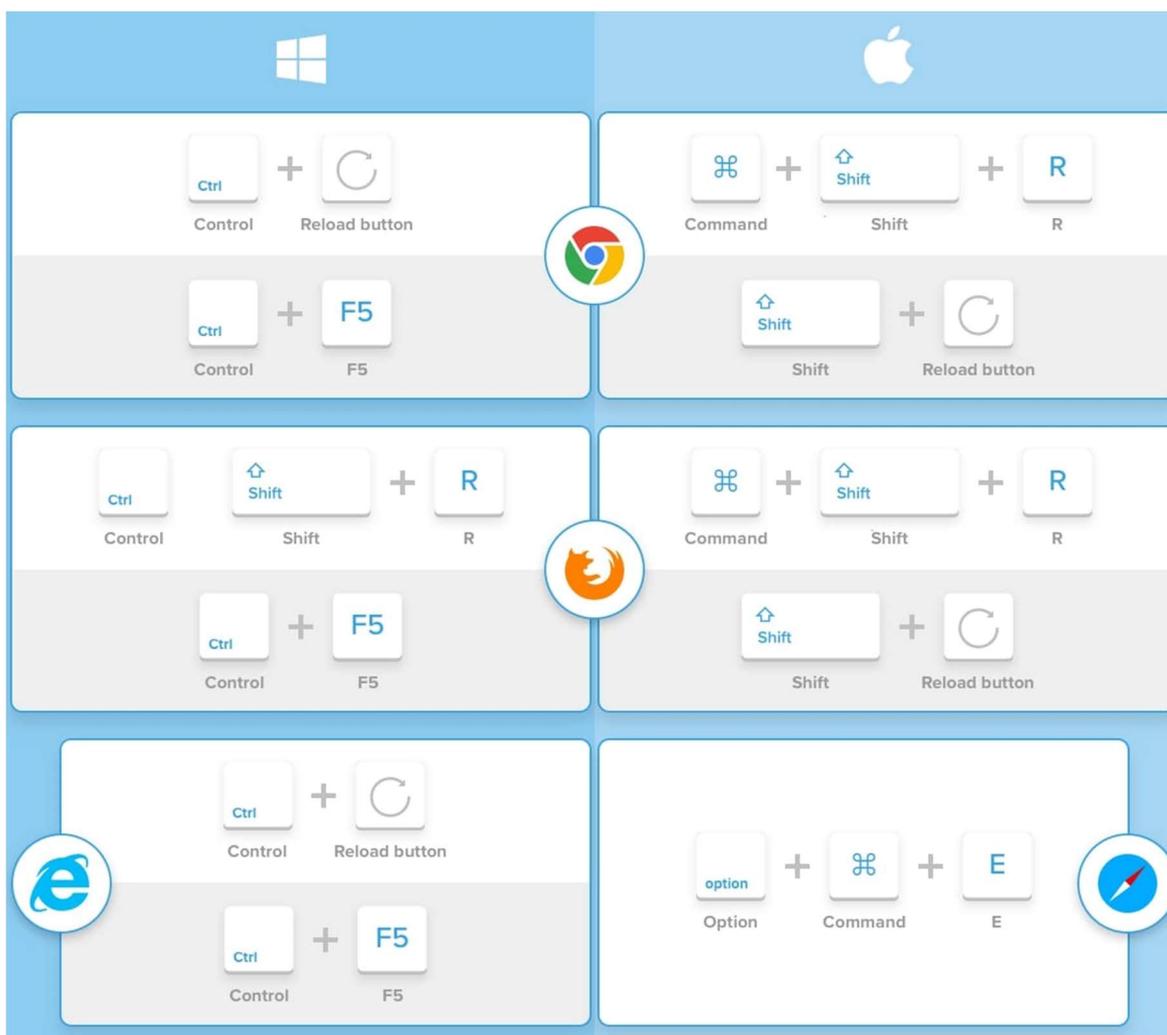

The application is completed in steps. You can only proceed with all required data. You can go back from any step and adjust the specified data.

① STEP - "APPLICANT"

APPLICATION TO ISSUE PERMIT

TO USE STATE SIGNIFICANCE ROADS
BY DRIVING OVER-DIMENSIONED AND (OR) HEAVY VEHICLE

APPLICANT
PERMIT
VEHICLE
AXLES
PARAMETERS
ROUTE
ATTACHMENTS

Personal data of applicant

The highlighted fields are required

Inquiry e-mail marsrutu.derinimas@lkd.lt, phone +370 5 232 9600. We recommend you press the Ctrl and F5 buttons together before filling or correcting the form.

Name of legal entity or name and surname of natural person

Address of legal entity or natural person

E-mail

Phone

Details of the applicant (owner or user of the over-dimensioned and / or heavy vehicle, i.e. **the holder of the permit**) must be provided: **name or name and surname and address**.

① Textual data (**name or name and surname and address**) as to be written in the application will be included in the permit. No one will correct the data (text) written in the application.

E-mail address, phone number must be provided of **the person completing the application** (representative of the owner or user of the vehicle or his authorized representative). A phone number is optional, but it is preferred if we need to contact you urgently.

② STEP - "PERMIT"

APPLICATION TO ISSUE PERMIT

TO USE STATE SIGNIFICANCE ROADS
BY DRIVING OVER-DIMENSIONED AND (OR) HEAVY VEHICLE

APPLICANTPERMITVEHICLEAXLESPARAMETERSROUTEATTACHMENTS

General information on permit

The highlighted fields are required

Starting date of driving / validity of permit

Type of permit

One time

Monthly

Annual

BACKNEXT

The **starting date of driving / validity of permit** and the **type of permit** requested must be indicated:

- to drive once on a specific route,
- for a month on all roads of national significance where traffic is not temporarily restricted or interrupted and / or these roads are not closed,
- for a year on all roads of national significance where traffic is not temporarily restricted or interrupted and / or these roads are not closed.

③ STEP - "VEHICLE"

APPLICATION TO ISSUE PERMIT

TO USE STATE SIGNIFICANCE ROADS
BY DRIVING OVER-DIMENSIONED AND (OR) HEAVY VEHICLE

APPLICANT
PERMIT
VEHICLE
AXLES
PARAMETERS
ROUTE
ATTACHMENTS

Vehicle

The highlighted fields are required

Lorry

Truck

Tractor / self-propelled machine

Car transporter (body type - BAF)

Regular fuel

Alternative fuel

Mark <input style="width: 100%;" type="text" value="Marké..."/>	Model <input style="width: 100%;" type="text" value="Modelis..."/>	Plate number <input style="width: 100%;" type="text" value="AAA000"/>	Number of axles <input style="width: 100%;" type="text" value="0"/>
<input type="radio"/> Trailer <input type="radio"/> Semi-trailer <input checked="" type="radio"/> None			
Mark <input style="width: 100%;" type="text" value="Marké..."/>	Model <input style="width: 100%;" type="text" value="Modelis..."/>	Plate number <input style="width: 100%;" type="text" value="AAA000"/>	Number of axles <input style="width: 100%;" type="text"/>

BACK
NEXT

Vehicle type, mark and model, plate number, fuel type, number of axles for each vehicle must be indicated. If the model is unknown (not specified in the registration certificate), enter "-".

① Textual data (**vehicle mark, model, plate number**) as to be written in the application will be included in the permit. No one will correct the data (text) written in the application.

① The vehicle type shall be selected according to the vehicle category in section (J) of the vehicle registration certificate. Motor vehicle of category N - indicate lorry, truck or car transporter respectively. A tractor or self-propelled machine shall be selected if the vehicle category is not a motor vehicle (not N). Car transporter (body type - BAF) shall be selected in case of combination of car transporter with trailer and only cars are transported, otherwise the lorry shall be marked.

① Possible vehicle combinations:

- Lorry + Trailer;
- Truck + Semi-trailer;
- Tractor / self-propelled machine + Trailer;
- Tractor / self-propelled machine + Semi-trailer;
- Car transporter + Trailer.

① Vehicle **plate number** write in capital letters and numbers, without spaces, dashes, or other characters.

④ STEP - "AXLE DATA"

APPLICATION TO ISSUE PERMIT

TO USE STATE SIGNIFICANCE ROADS
BY DRIVING OVER-DIMENSIONED AND (OR) HEAVY VEHICLE

APPLICANT
PERMIT
VEHICLE
AXLES
PARAMETERS
ROUTE
ATTACHMENTS

Axles data

For lorries and trucks it is necessary to mark the drive axle.

Axle serial number	Steer axle	Driving axle	Air suspension	Twin tyres	Axle weight (t)	Distances between axles (m)
1	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input style="width: 80px;" type="text" value="0.0"/>	
2	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input style="width: 80px;" type="text" value="0.0"/>	<input style="width: 80px;" type="text" value="0.00"/>
3	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input style="width: 80px;" type="text" value="0.0"/>	<input style="width: 80px;" type="text" value="0.00"/>
4	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input style="width: 80px;" type="text" value="0.0"/>	<input style="width: 80px;" type="text" value="0.00"/>

BACK
NEXT

The number of rows of axles data that the number of axles was specified in ③ step is automatically generated.

The axle data of each vehicle must be indicated: **steering and driving axles, air suspension, twin tyres, each axle weight and distances between axles** (from the previous axle).

① The distances between the axles are given to 2 decimal places, the axle weights are given to 1 decimal place. The distance between the axes is specified between the center of the axles. Measure best from the edge of the rim to the same edge of another rim.

① The actual axle weights must be indicated, the sum of which will be the total weight of the laden vehicle.

① Steering axles, air suspension, twin tyres may be unmarked if this does not affect the maximum permissible axle weight or total weight according to the maximum permissible parameters of vehicles and their combinations.

⑤ STEP – “PARAMETERS”

APPLICATION TO ISSUE PERMIT

TO USE STATE SIGNIFICANCE ROADS
BY DRIVING OVER-DIMENSIONED AND (OR) HEAVY VEHICLE

APPLICANT
PERMIT
VEHICLE
AXLES
PARAMETERS
ROUTE
ATTACHMENTS

Parameters of vehicle with load

Highlighted fields are obligatory

Length (m)	Width (m)	Height (m)	Weight (t)
<input style="border: 1px solid red;" type="text" value="0.00"/>	<input style="border: 1px solid red;" type="text" value="0.00"/>	<input style="border: 1px solid red;" type="text" value="0.00"/>	<input style="background-color: #f0f0f0;" type="text" value="40"/>
Inner turn radius (m)	Outer turn radius (m)	Maximum permissible weight stated by the manufacturer (t)	
<input style="border: 1px solid red;" type="text" value="0.00"/>	<input style="border: 1px solid red;" type="text" value="0.00"/>	<input style="border: 1px solid red;" type="text" value="0.0"/>	

With load Without load
 Divisible load Indivisible load

Name of load

Krovinio pavadinimas...

Length (m)	Width (m)	Height (m)	Weight (t)
<input style="border: 1px solid red;" type="text" value="0.00"/>	<input style="border: 1px solid red;" type="text" value="0.00"/>	<input style="border: 1px solid red;" type="text" value="0.00"/>	<input style="border: 1px solid red;" type="text" value="0.0"/>

BACK
NEXT

The parameters of the **vehicle or their combination with the load** must be indicated above: **length, width, height**.

① The **weight of the vehicle with the load** is calculated by summing the axle weights specified in ④ step, it is not changed manually.

The **inner and outer turn radius** of the vehicle or combination of vehicles and the **maximum permissible weight stated by the manufacturer** must be indicated.

① According to the maximum permissible parameters for vehicles and their combinations for use roads, all vehicles must run on a ring with an **inner radius** of 5,30 m and an **outer radius** of 12,50 m. Therefore, such data can be provided for most vehicles. Only for very large vehicles the turn radius should be specified precisely.

① The **maximum permissible weight stated by the manufacturer** is specified in section (F) of the vehicle registration certificate.

The details of the **load** must be given below: **type (divisible or indivisible), name, length, width, height and weight**. If more than one load is carried, indicate the name, dimensions (L x W x H) and weight (W) of each load unit in the load name field and the overall dimensions and weight in the load parameters fields.

① Textual data (**load name**) as to be written in the application will be included in the permit. No one will correct the data (text) written in the application.

① The dimensions are given to 2 decimal places, the weights are given to 1 decimal place.

⑥ STEP - "ROUTE"

APPLICATION TO ISSUE PERMIT

TO USE STATE SIGNIFICANCE ROADS
BY DRIVING OVER-DIMENSIONED AND (OR) HEAVY VEHICLE

APPLICANT
PERMIT
VEHICLE
AXLES
PARAMETERS
ROUTE
ATTACHMENTS

Planning of route

Privalote nurodyti maršrutą

Distance: 0 km
Distance on roads owned by LRA: 0 km
Distance on I category roads: 0 km

Remarks:

BACK
PLAN OUT
NEXT

① This step is only active when applying for a one-time permit. This step is inactive and is automatically skipped when requesting a monthly or annual permit.


① Any informative remarks (e.g., how to avoid various restrictions on the road) can be entered in the remarks field. These remarks do not affect the planned route, the route is coordinated and a permit is issued for those roads of national significance, the numbers of which will be indicated in the text description of the route between the start and end points of the route in the grey field.

① The total distance indicated includes the length of the entire route, including roads of national significance (owned by SE Lithuanian Road Administration) and roads of local significance (streets) (owned by municipalities).


Route planning starts at the touch of a button

PLAN OUT


Route planning takes place on the Lithuanian roads map:

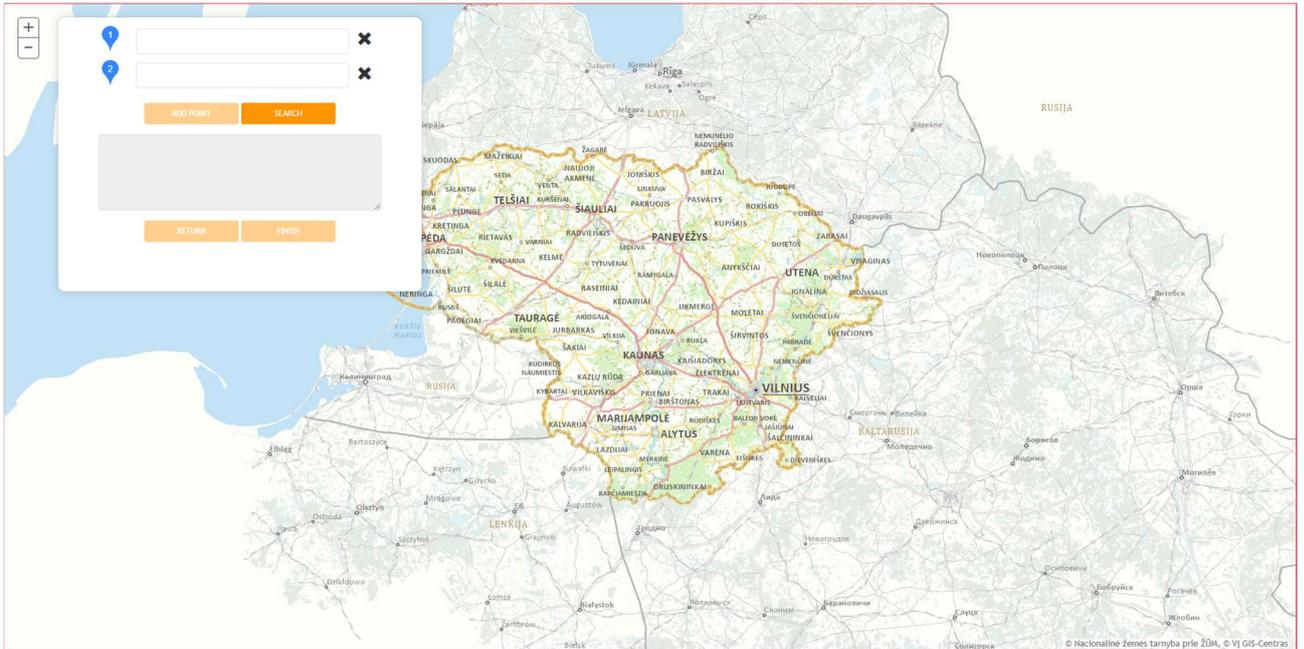

- ❶ The **exact route to be used for the permit** must be laid out and displayed on the map.
- ❷ The system does not tell you where and how you need to go, it just helps you plan it properly by finding the shortest and fastest route between two points and showing the restrictions on the route.
- ❸ Whatever route will be arranged, such will be coordinated, and such will be authorized. The route is not coordinated if it contains traffic restrictions that prohibit driving the vehicle with the parameters specified in the application.
- ❹ The route must be specified **from the place of departure to the place of destination**. If a return is required, a separate application must be made indicating the return route from the place of departure to the place of destination.
- ❺ When filling in a new application based on the data of the previous application and leaving the same route, the **button**  on the routing map **must be pressed again** to have the system re-evaluate the vehicle parameters and the **traffic restrictions valid when filling in a new application**.
- ❻ The **start and end points of the route** must be selected by entering a fragment of the **name of the address or border control point (PKP)** in the field and selecting from the values found. Selecting this will show the exact point on the map according to the selected address or PKP name:

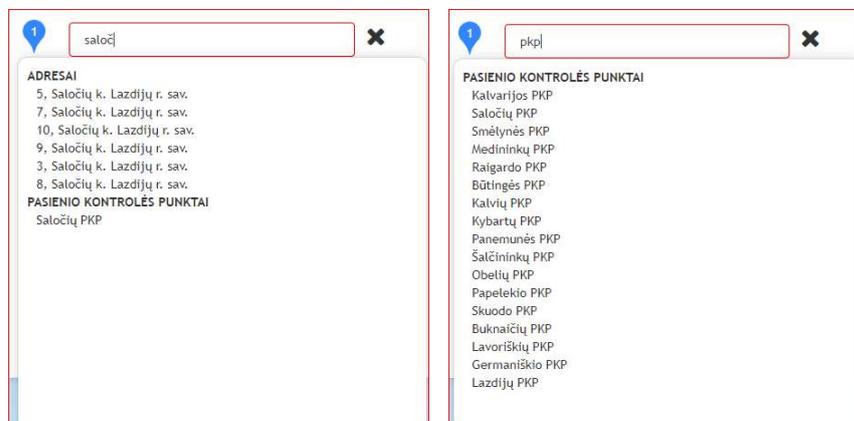


Address search is performed by fragmenting text in the search box. You can type "basan 36 viln" and search for each part of the text you enter:

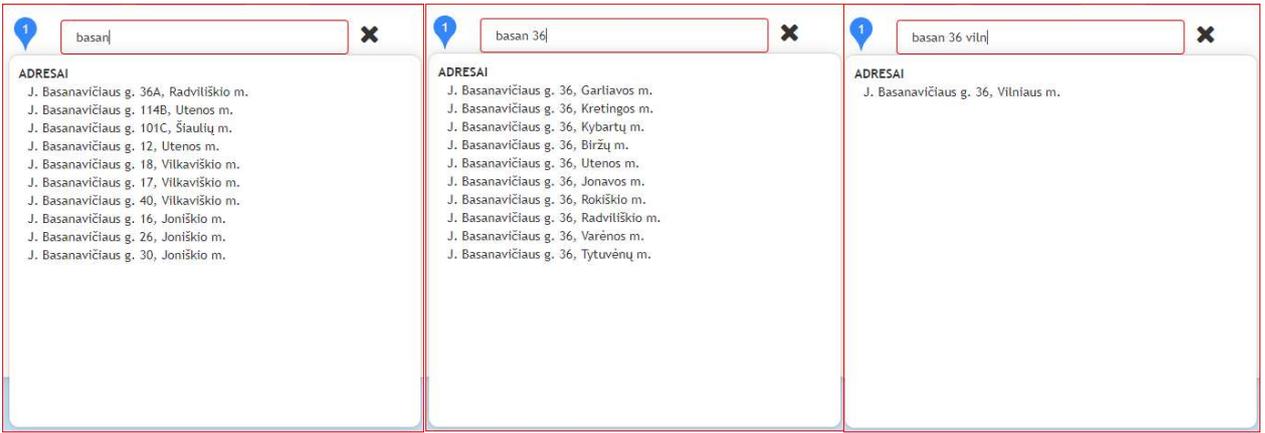


① When pressed **SEARCH**, the system generates the shortest and fastest route from the sections **between each of the two specified points** (when searching for the shortest and fastest route, the system evaluates the speed limits on the roads and can therefore bypass the speed-restricted road sections).

The route can be planned as needed by tilting the roads as needed, for example:

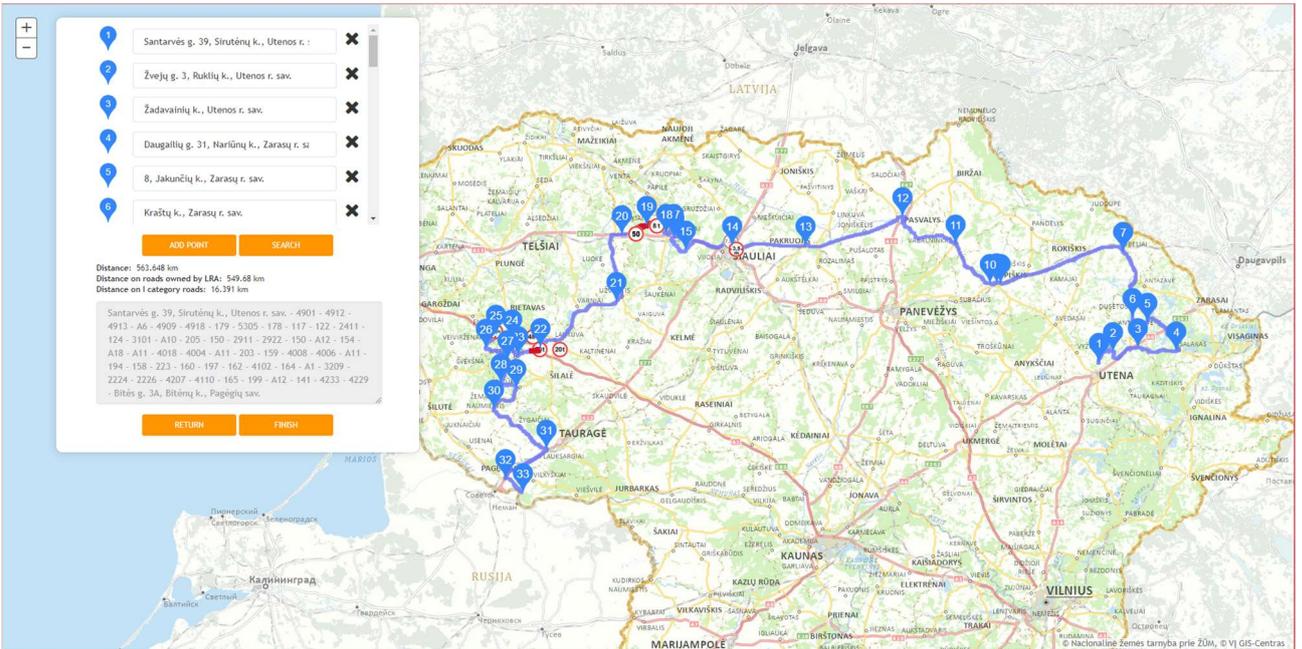

① The system will not form a route on the road if the restrictions include a section of road where traffic is prohibited:

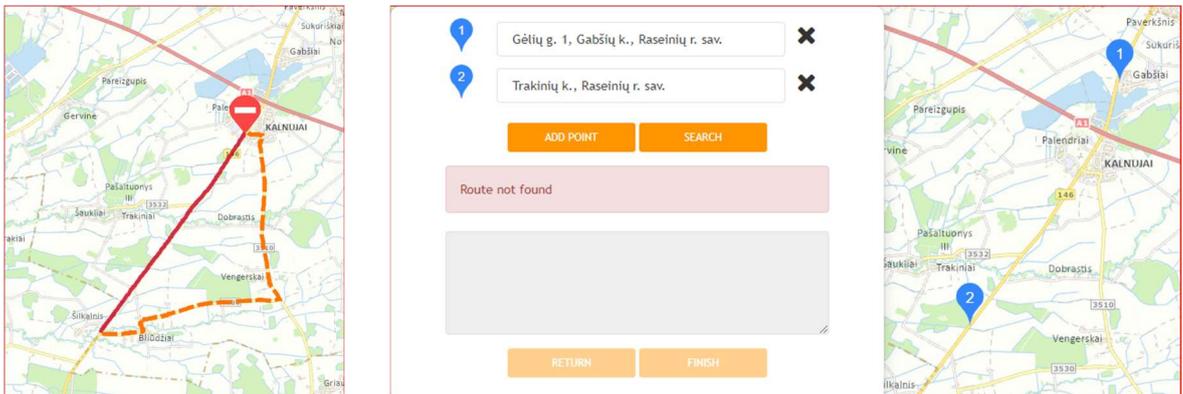


① The **transitional points of the route** must be selected on the map by right-clicking the mouse button on the road and then left-clicking on the text "Add new point":



① When placing a point on the map on a road with central reservation, it is advisable to enlarge the map so that the point is not placed in the opposite lane, as the system will look for a route on how to reach the point on the other side of the road. It is also not advisable to place points at crossroads with access and egress roads. It is better to place the point on a straight section of road in front of or behind the crossroad.


① The order of the points can be changed in the list of points on the point guide  by left-clicking and moving up or down to the desired location:

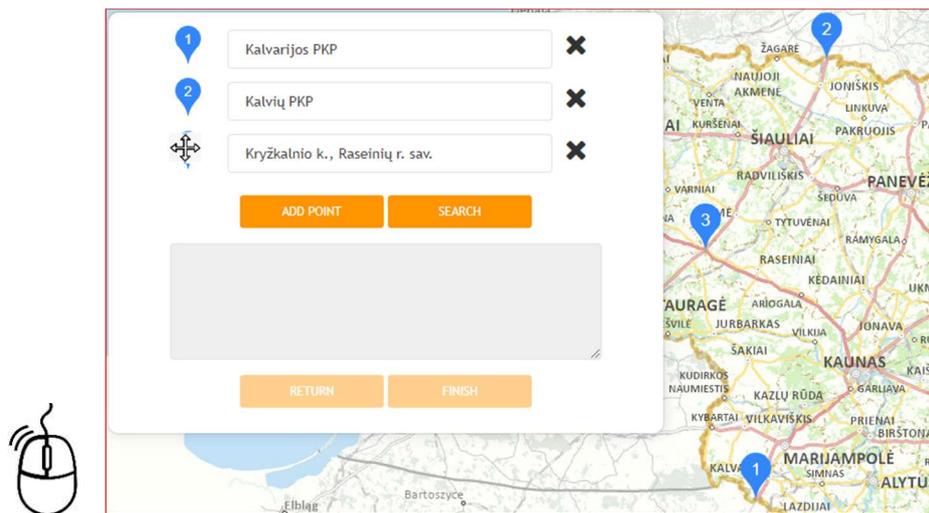


① The **route formed by the system must be carefully reviewed** to see if it corresponds to your driving plan. If not, the route needs to be adjusted by placing transitional points on the roads through which the system should route.

① If there are traffic restrictions on the route that prevent the vehicle from running with the parameters specified in the previous steps, such restrictions are displayed in red, marking in red the part of the route where the restrictions apply. It is recommended to change the route, as such a route may be inconsistent, unless it is known that it will be possible to drive through the displayed restriction (e.g., agreed with the contractor on driving through the workplace).


① If the restriction on the route is not an obstacle, it is shown in grey.

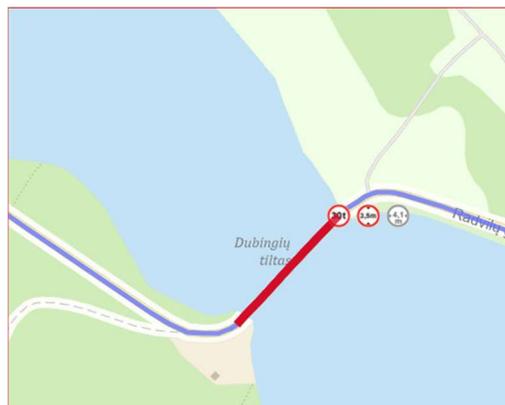


If a speed limit is displayed on the route:

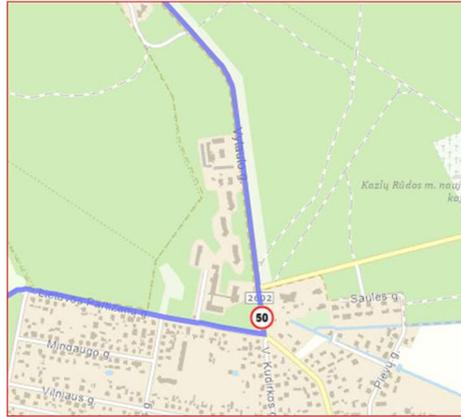

<http://www.eismoinfo.lt> selecting "Map information" to show temporary and all traffic restrictions:

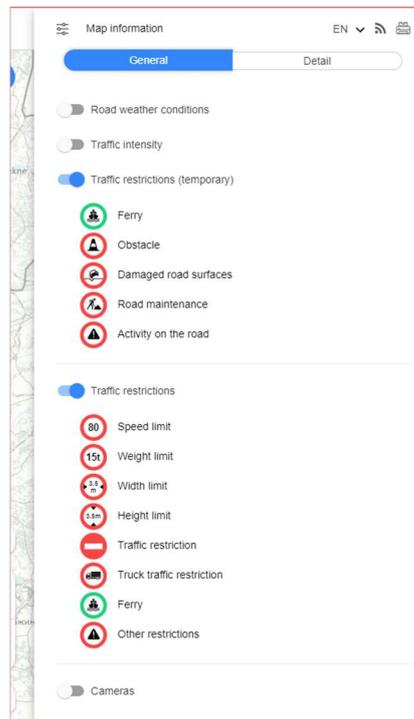

and right-clicking on the restriction on the map should find out what the problem is and whether there will be any obstacles to passing the road section (if the narrowed carriageway, traffic is regulated by traffic lights, it can be an obstacle for a very wide vehicle - contact the person indicated, as the contractor is responsible for traffic safety at the workplace):

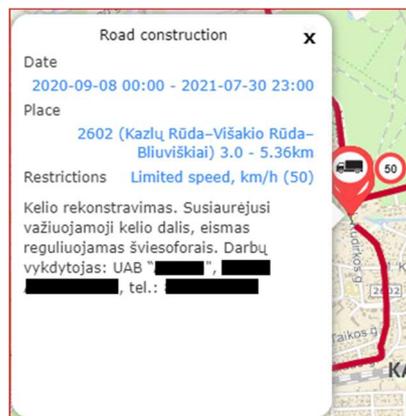

When the route is complete, press the buttons **FINISH** and **CONFIRM** if the route is correct:

ATTENTION

Carefully view the planned route, whether it corresponds to your driving plan. If the route does not correspond to your driving plan, press "Return" and correct the route. If the route corresponds to your driving plan, click "Confirm".

RETURN
CONFIRM

You will return to the route planning step, which specifies the planned route on roads of national significance (sequence of road numbers) and from which it will be possible to move to the next step:

APPLICATION TO ISSUE PERMIT

TO USE STATE SIGNIFICANCE ROADS
BY DRIVING OVER-DIMENSIONED AND (OR) HEAVY VEHICLE

APPLICANT
PERMIT
VEHICLE
AXLES
PARAMETERS
ROUTE
ATTACHMENTS

Planning of route

J. Basanavičiaus g. 36, Vilniaus m. - A1 - Baltijos pr. 40, Klaipėdos m.

Distance: 306.042 km
Distance on roads owned by LRA: 293.839 km
Distance on I category roads: 291.561 km

Remarks:

BACK
PLAN OUT
NEXT

🔗 STEP - "ATTACHMENTS"

APPLICATION TO ISSUE PERMIT

TO USE STATE SIGNIFICANCE ROADS
BY DRIVING OVER-DIMENSIONED AND (OR) HEAVY VEHICLE

APPLICANT
PERMIT
VEHICLE
AXLES
PARAMETERS
ROUTE
ATTACHMENTS

Attachments to application

Copy of the registration certificate of the vehicle if the vehicle is registered outside the Republic of Lithuania and its type is tractor / self-propelled machinery, number of pages

ATTACH DOCUMENTS

BACK
NEXT

❗ This step is only active when the requested vehicle type is a **tractor / self-propelled machine**. In other cases, this step is inactive and is skipped automatically.

❗ If the vehicle type specified in the application is a **tractor / self-propelled machine** and it is **registered outside the Republic of Lithuania**, it is **necessary to attach a copy of the vehicle registration certificate** (to check the vehicle type due to lower charge rates for tractors and self-propelled machines). A copy of the vehicle registration certificate **is not required** when the **tractor / self-propelled machine is registered in the Register of Tractors, Self-propelled and Agricultural Machinery and their Trailers of the Republic of Lithuania**.

You must **specify the number of pages of documents** to be submitted and **upload copies of the required documents** by clicking the button ATTACH DOCUMENTS.

If no documents are submitted, just go ahead.

By pressing the button , the application is completed and the application data can be submitted to the system of permits or come back:

NOTICE

Completed successfully.

Data of application will be submitted to the State Enterprise Lithuanian Road Administration. Please follow guidelines received by e-mail.

To evaluate and to improve the services provided by the Road Administration, we kindly invite you to take part in the survey. If you agree, please, mark "I agree". A survey will be sent to your e-mail address. The survey is anonymous. Only generalized and depersonalized data will be used.

I agree to take part in the survey of the Road Administration

To revoke your consent, or for more information, please contact us by email apklausa@lakd.lt.

By pressing the button , the application is registered in the system of permits and processed. You can fill in a new application or go to the application status check window (automatically switches to the application status check after 10 seconds):

UPLOADING

 Application successfully submitted.

In 10 seconds you will be redirected to the application status checker.

When the application is successfully submitted, it is assigned the application code YYYYMMDD_XXXXXX. The application status check window shows the status of the application being processed. If the system adjusts the route automatically, it calculates the charge immediately:

APPLICATION STATUS CHECK

Application code:



 **Waiting for payment**

Calculated charge: 167.10€

If payment has been made via the system (via electronic banking or by bank card) and confirmation of payment has been received, the permit is issued within a few minutes. Should confirmation of payment be delayed, it is either at the bank's fault or an E-Government Gateway error. In case you have already made payment via the system, but the payment has not been automatically charged, please email a copy of the transfer at marsrutu.derinimas@lakd.lt. We will investigate the problem and, if necessary, register the payment manually.



Clicking  takes you to the E-Government Gateway, where payment can be made via electronic banking or a bank card.



Elektroniniai valdžios vartai

E-Government Gateway
Administracinių ir viešųjų elektroninių paslaugų portalas

Paslaugos apmokėjimas

Varnele pažymint laukelį "Sutinku" Jūs patvirtinsite, kad sutinkate apmokant paslaugą savo asmeninius duomenis (vardas, pavardė ir asmens kodas) perduoti trečiajai šaliai – mokėjimo paslaugų teikėjui. Šie duomenys bus naudojami mokėjimui atlikti pasirinktoje mokėjimo sistemoje. Jei mokėjimą atliksite per Mokėjimo tarpininką, Jūsų duomenys bus perduoti tarpininko informacinei sistemai ir jis bus nurodytas įmokos gavėju. Jei nesutinkate, kad Jūsų asmens duomenys būtų perduoti trečiajai šaliai, spauskite mygtuką "Atmesti mokėjimą".

I Agree

Cancel payment

You must check the "I Agree" box and the payment selection window will appear:

Paslaugos apmokėjimas

Varnele pažymint laukelį "Sutinku" Jūs patvirtinsite, kad sutinkate apmokant paslaugą savo asmeninius duomenis (vardas, pavardė ir asmens kodas) perduoti trečiajai šaliai – mokėjimo paslaugų teikėjui. Šie duomenys bus naudojami mokėjimui atlikti pasirinktoje mokėjimo sistemoje. Jei mokėjimą atliksite per Mokėjimo tarpininką, Jūsų duomenys bus perduoti tarpininko informacinei sistemai ir jis bus nurodytas įmokos gavėju. Jei nesutinkate, kad Jūsų asmens duomenys būtų perduoti trečiajai šaliai, spauskite mygtuką "Atmesti mokėjimą".

I Agree

Payment type	Valstybinė mokesčių inspekcija
Service	Lietuvos automobilių kelių direkcija prie SM
Payment purpose	#0#Łukasz Filus#20210719_214884###
Amount	167.10 EUR
Commission fee	0.00 EUR
Total price	167.10 EUR
	Už VĮ Lietuvos automobilių kelių direkcija teikiamas paslaugas
Payment means	<div style="display: flex; justify-content: space-around; align-items: center;"> <div style="border: 1px solid #ccc; padding: 5px; text-align: center;">  </div> <div style="border: 1px solid #ccc; padding: 5px; text-align: center;">  </div> <div style="border: 1px solid #ccc; padding: 5px; text-align: center;">  </div> </div>
Payment type	Mokėjimas pavedimu per mokėjimo tarpininką FoxPay, UAB
Service	Lietuvos automobilių kelių direkcija prie SM
Payment code	7840
Payment purpose	#0#Łukasz Filus#20210719_214884###
Amount	167.10 EUR
Commission fee	0.28 EUR
Total price	167.38 EUR
	Už VĮ Lietuvos automobilių kelių direkcija teikiamas paslaugas
Payment means	<div style="display: flex; justify-content: space-around; align-items: center;"> <div style="border: 1px solid #ccc; padding: 5px; text-align: center;">  </div> <div style="border: 1px solid #ccc; padding: 5px; text-align: center;">  </div> <div style="border: 1px solid #ccc; padding: 5px; text-align: center;">  </div> </div>
Payment type	Atsiskaitymas kortele per mokėjimo tarpininką FoxPay, UAB
Service	Lietuvos automobilių kelių direkcija prie SM
Payment code	7840
Payment purpose	#0#Łukasz Filus#20210719_214884###
Amount	167.10 EUR
Commission fee	0.75 EUR
Total price	167.85 EUR
	Už VĮ Lietuvos automobilių kelių direkcija teikiamas paslaugas
Payment means	<div style="border: 1px solid #ccc; padding: 5px; display: inline-block;">  </div>

Cancel payment


Next, select your bank or payment card and make a payment.

ⓘ If you connect to e-banking with the same means of connection to both personal and corporate accounts, you must select the appropriate account from which to make the payment.

① When paying through the electronic banking of some banks or bank card, the payment to the account of the State Tax Inspectorate is made through a payment agent - FoxPay, UAB, which charges a brokerage fee. You need to choose whether a VAT invoice is required for the brokerage fee and specify the e-mail address to which FoxPay, UAB confirmation of payment will be sent.

① The Payment via E-Government Gateway window can also be accessed:

- By clicking on the link in the system's e-mail that points to the application status check window with the application code.
- <http://www.eismoinfo.lt/leidimai> in the menu in the upper right corner, select "Check application status" and enter the application code manually.

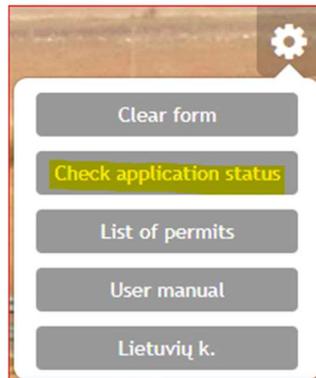

① If part of the charge from the previous payment balance has been deducted to the application, the check of application status shows the amount of charge calculated according to the application, and the payment order shows how much is actually paid after deducting the balance of the previous payment.

SEARCH OF PERMIT

<http://www.eismoinfo.lt/leidimai> selecting "List of permits" in the menu in the upper right corner provides a list of issued permits (permits that have expired or been revoked are not displayed here):

Permit No	Driving date from	Driving date to	Vehicle owner	Vehicle plate number	Trailer plate number
-----------	-------------------	-----------------	---------------	----------------------	----------------------

The permit can be found by fragments of application or permit number, name of the vehicle owner (user), permit validity dates or the plate number of the vehicle specified in the permit.

MODIFICATION OF THE VEHICLE IN THE PERMIT

The link provided in the system e-mail on the issued (changed) permit can be used to change the data of the vehicles specified in the permit - mark, model and plate number.

Data that can be changed will be in white fields, which cannot be changed - in grey fields.

Enter the new data in the white fields and press the button :

After changing the data, the system will create a new permit, send a message by e-mail and published on the Internet ("List of permits").

FAQ (FREQUENTLY ASKED QUESTIONS)

How to distinguish which path is of national significance and which is of local significance?

The list of roads of national significance was approved by the Government resolution No 757 of June 9, 1999. Look the current consolidated version <https://www.e-tar.lt/portal/lt/legalActEditions/TAR.570A9BF4BF16>.

Roads of national significance managed by the SE Lithuanian Road Administration are marked with road numbers:

-  – main roads,
-  – national roads,
-  – regional roads.

Maps are marked as follows:



– the main road line is marked in light red with a number on a red background,




– the national road line is marked in yellow with a number on a yellow background,



– the regional road line is marked in light yellow with a number on a white background.

In order to see more clearly on the map which roads are of national significance, <http://eismoinfo.lt> has chosen to view the layer “Road surface course” – all roads of national significance are covered with this layer:

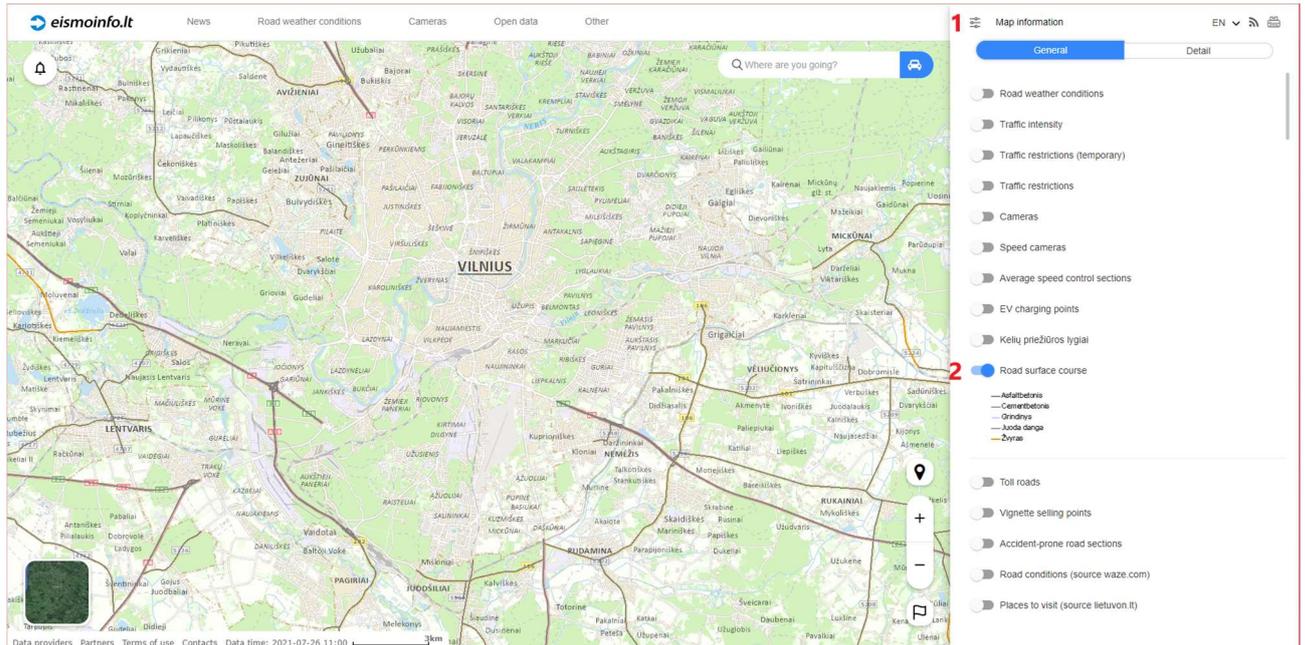

Roads that are not coloured and marked with a road number are roads of local significance. For their use, you need to contact the road owner - the municipality.

If inaccurate data or an inaccurate route is provided when completing the application, will the data or route be corrected when the permit is issued?

The owner or user of an over-dimensioned and / or heavy vehicle or a person authorized by him is responsible for the accuracy and correctness of the data provided in the application.

The application shall be processed as submitted and the permit shall be issued with the data and route specified in the application, except for the vehicle parameters (length, width, height, weight and axle weight) which shall be greater: actual (specified in the application) or maximum permissible parameters for use roads.

How to find out about the progress of the application, what is the amount of the road charge or whether a permit has been issued?

The system assigns a unique number to each submitted application (e.g., 20171201_123456), which is further used throughout the permitting process. The system sends notifications to the e-mail address indicated in application about the application has been received, the charge has been calculated, the permit has been issued, the permit has been changed (when changing the vehicle), the permit has been repealed or the application has been rejected. Therefore, when filling in the application, the e-mail address to which system messages will be sent must be specified without errors.


What if I don't receive system notifications?

Check unwanted e-mail (SPAM, Junk) folder in your mailbox. If the system messages did not go to the junk e-mail folder, it is likely that the e-mail address was incorrectly specified when filling in the application. Need to contact by e-mail marsrutu.derinimas@lakd.lt indicating the application code or the name of the applicant and the date of submission of the application. If the application is found according to the information provided, an application number with a link to the application data will be sent to you by e-mail.

How and where else can you check the status of the application, find the issued permit?

<http://eismoinfo.lt/leidimai> in the upper right corner there is a menu where you can choose:

- a application to be filled again;
- check the status of the application;
- review the permits issued;
- get acquainted with this User Manual;
- select the interface language in which the application form is provided and system messages are sent by e-mail (in Lithuanian or English).

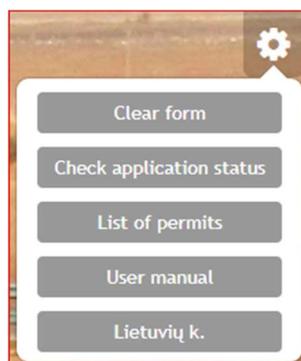

Is it necessary to re-enter the data each time the application is completed?

Systems notification by e-mail shall contain a link through which the data of the application submitted may be reviewed or amended and a new application submitted.

Is there a need to pay a state-imposed fees and charges for the issuance of a permit to use roads of national significance by driving over-dimensional and/or heavy vehicle?

No state-imposed fees and charges has been set for the SE Lithuanian Road Administration permit issuance service.

How to pay a charge for use of roads?

The charge can be paid using electronic banking or a bank card through the E- Government Gateway. The system immediately issues a permit upon receipt of a successful payment confirmation.

The charge can also be paid by ordinary transfer or at a payment collection point, but then it is required to submit by e-mail marsrutu.derinimas@lakd.lt a copy of the payment document, and the issuance of the permit will take longer.

By when do I have to pay for road use?

Payment of the charge must be registered in the system before the end of the day of the driving / of starting validity of permit specified in the application.

If payment is made using electronic banking or a bank card via the E-Government Gateway, the payment will be registered and the permit will be issued automatically (the system must receive a confirmation of successful payment from the E-Government Gateway).

If payment will be made by ordinary transfer or at payment collection point, a copy of the payment document must be submitted by e-mail marsrutu.derinimas@lakd.lt and the payment must be registered manually in the system by an employee of the SE Lithuanian Road Administration.

Will payment be registered outside of business hours after paying a charge for use roads by ordinary transfer or at payment collection points?

Employees of the SE Lithuanian Road Administration, which register payments, work around the clock. However, if a copy of the payment document is sent by e-mail just before the end of the day of the driving / of starting validity of permit specified in the application, the payment may not be registered and the permit will not be issued. Payment of the charge will not be offset and the permit will not be issued if a copy of the payment document is not provided.

How long does it take to issue a permit?

The system issues the permit automatically within 1-2 minutes, after the payment of the charge has been registered in the system. Therefore, when choosing the payment method and paying the charge, it is necessary to assess whether the payment will be registered and the permit will be issued in time.

How long does it take for a coordination of driving route?

If the system does not automatically coordinate the driving route, an employee of the SE Lithuanian Road Administration will have to confirm in the system that it is possible to drive on the route indicated in the application (as shown on the map) or reject the application with comments. Usually, applications that require the approval of an employee of the SE Lithuanian Road Administration are reviewed on the same or the next business day.

What to specify in the application when driving a harvester combined with a header trailer without a plate number?

Specify tractor / self-propelled machine (2 axles) and trailer (1-2 axles). Provide the same data for both vehicles: harvester mark, model and plate number.

Mark, model and plate number will also be recorded with the trailer data.

What if when entering data with a comma or dot, the system warns that the value is incorrect or not specified?

Different operating systems and / or web browsers understand the meanings of numbers with a different separator (comma or dot). Therefore, if, after entering a comma or a dot, the system warns that the value is incorrect or not specified, the delimiter must be replaced (use a dot instead of a comma or vice versa).

What if I don't see a map (white background) when filling out my application?

If a white background appears instead of a map, you need to restart your web browser by pressing Ctrl and F5. Reloading the web browser clears all data entered or corrected in the previous steps. Therefore, as a precaution, it is recommended to press the Ctrl and F5 keys before filling in the application to restart the web browser, so that the entered data is not cleared afterwards.

Is the permit issued free of charge?

If the system does not calculate a charge, the permit is issued as soon as the driving route is coordinated. The charge is not calculated when the part of the route on roads of national significance is less than 10 km (tariffs are per 10 km), or when parameters of tractor / self-propelled machine exceed only the maximum permissible dimensions (no charge for over-dimension is specified), or when the actual weight of the vehicle is less than 40 t (the charge is calculated when the weight is more than 40 t).

How do I change the vehicle in the permit?

The system notification about the issued (changed) permit shall include a link to the window for changing the permit data on the website, where it is possible to change the vehicles specified in the permit, which can be changed.

What if the system message with a link to the change window in the vehicle data in permit is deleted?

Contact by e-mail marsrutu.derinimas@lakd.lt indicating the permit number and requesting a link to the data change window, then the required link will be sent to you by email.

Which lane to drive by a heavy vehicle when it is indicated that you need to drive in the middle of a bridge or viaduct (structure)?

You need to drive in the middle between the barriers. If the road is without a central reservation, then between the side barriers located on both sides of the bridge or viaduct. If the road has a central reservation, then between the barrier of the central reservation on the left and the side barrier of the bridge or viaduct on the right:

